Insulated Conductor Rail SinglePowerLine Program 0812

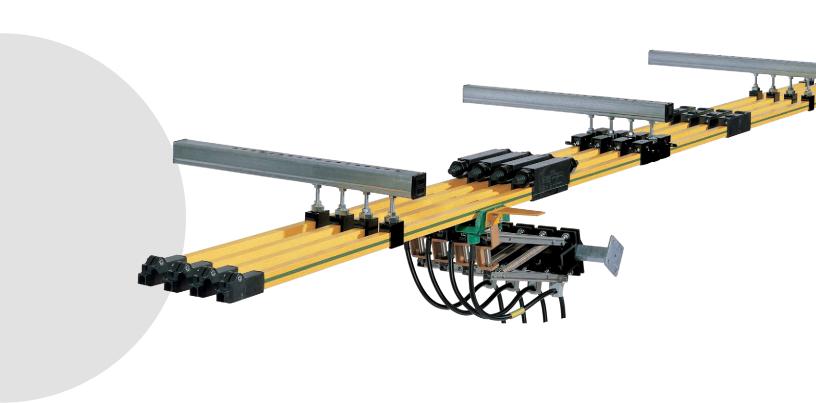




Table of Contents

Technical Data	5
General Instructions	6
System Structure	7
Components and their use	
Insulated Conductor Rails	8
Clamps and Connectors	10
Hanger Clamps	
Compact Hanger Clamps	
Rail Connectors	
Power Feed Connectors	
End Caps.	
Air Gaps	13
Expansion Units	14
Expansion Units	14
Pickup Guide for Intersections	1.0
rickup dulue ioi intersections	16
Current Collectors	17
Current Collectors (Plastic Arm Type).	
Current Collectors (Parallel Arm Metal Type).	18
Installation spacing for Current Collectors	18
Dual Current Collectors (Parallel Arm Metal Type) Installation Instructions and Assembly Help for Current Collectors	
Installation instructions and Assembly field for Guiterit Collectors	
Dimensioning and Layout of Conductor Rail System	22
Custom Lavout	0.5
System Layout	25
Layout Schematic and Component Overview	
Mounting Accessories	27
Support Arms 30 × 32 × 2 mm - perforated	
O	27
Support Arms $40 \times 40 \times 2.5$ mm - perforated	
Permissible Load for Support Arms	
Permissible Load for Support Arms	28
Permissible Load for Support Arms	
Permissible Load for Support Arms . Holders for Support Arm $32 \times 30 \times 2$ for Screw Mounting with 2-holed Connector Plate . Holders for Support Arm $40 \times 40 \times 2.5$ for Screw Mounting with 2-holed Connector Plate . Girder Clips, Clamping Thickness 4 - 20 mm . Girder Clips, Clamping Thickness 18 - 36 mm .	
Permissible Load for Support Arms . Holders for Support Arm $32 \times 30 \times 2$ for Screw Mounting with 2-holed Connector Plate . Holders for Support Arm $40 \times 40 \times 2.5$ for Screw Mounting with 2-holed Connector Plate . Girder Clips, Clamping Thickness 4 - 20 mm . Girder Clips, Clamping Thickness 18 - 36 mm . Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm .	
Permissible Load for Support Arms . Holders for Support Arm $32 \times 30 \times 2$ for Screw Mounting with 2-holed Connector Plate . Holders for Support Arm $40 \times 40 \times 2.5$ for Screw Mounting with 2-holed Connector Plate . Girder Clips, Clamping Thickness 4 - 20 mm . Girder Clips, Clamping Thickness 18 - 36 mm .	
Permissible Load for Support Arms . Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate . Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate . Girder Clips, Clamping Thickness 4 - 20 mm . Girder Clips, Clamping Thickness 18 - 36 mm . Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm . Towing Arms . End Caps Insulators	
Permissible Load for Support Arms . Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate . Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate . Girder Clips, Clamping Thickness 4 - 20 mm . Girder Clips, Clamping Thickness 18 - 36 mm . Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm . Towing Arms . End Caps Insulators . Notch-type Cable Lugs for Power Feed Line .	
Permissible Load for Support Arms . Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate . Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate . Girder Clips, Clamping Thickness 4 - 20 mm . Girder Clips, Clamping Thickness 18 - 36 mm . Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm . Towing Arms . End Caps Insulators	
Permissible Load for Support Arms . Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate . Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate . Girder Clips, Clamping Thickness 4 - 20 mm . Girder Clips, Clamping Thickness 18 - 36 mm . Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm . Towing Arms . End Caps Insulators . Notch-type Cable Lugs for Power Feed Line. Connector Cables for Current Collector Head 081209 . Spring Assembly (lateral insertion) for Current Collector Head 081209 .	
Permissible Load for Support Arms . Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate . Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate . Girder Clips, Clamping Thickness 4 - 20 mm . Girder Clips, Clamping Thickness 18 - 36 mm . Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm . Towing Arms . End Caps . Insulators . Notch-type Cable Lugs for Power Feed Line. Connector Cables for Current Collector Head 081209 . Spring Assembly (lateral insertion) for Current Collector Head 081209 . Tools and Assembly Accessories	
Permissible Load for Support Arms . Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate . Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate . Girder Clips, Clamping Thickness 4 - 20 mm . Girder Clips, Clamping Thickness 18 - 36 mm . Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm . Towing Arms . End Caps . Insulators . Notch-type Cable Lugs for Power Feed Line . Connector Cables for Current Collector Head 081209 . Spring Assembly (lateral insertion) for Current Collector Head 081209 . Tools and Assembly Accessories . Mounting Comb 081045	
Permissible Load for Support Arms . Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate . Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate . Girder Clips, Clamping Thickness 4 - 20 mm . Girder Clips, Clamping Thickness 18 - 36 mm . Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm . Towing Arms . End Caps . Insulators . Notch-type Cable Lugs for Power Feed Line. Connector Cables for Current Collector Head 081209 . Spring Assembly (lateral insertion) for Current Collector Head 081209 . Tools and Assembly Accessories	
Permissible Load for Support Arms Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate Girder Clips, Clamping Thickness 4 - 20 mm. Girder Clips, Clamping Thickness 18 - 36 mm. Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm Towing Arms End Caps. Insulators Notch-type Cable Lugs for Power Feed Line. Connector Cables for Current Collector Head 081209 Spring Assembly (lateral insertion) for Current Collector Head 081209 Tools and Assembly Accessories Mounting Comb 081045 Bending Device 081010. Contact Grease for Connection Points	
Permissible Load for Support Arms. Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate. Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate. Girder Clips, Clamping Thickness 4 - 20 mm Girder Clips, Clamping Thickness 18 - 36 mm Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm Towing Arms End Caps. Insulators Notch-type Cable Lugs for Power Feed Line. Connector Cables for Current Collector Head 081209 Spring Assembly (lateral insertion) for Current Collector Head 081209 Tools and Assembly Accessories Mounting Comb 081045 Bending Device 081010 Contact Grease for Connection Points Replacement Parts	
Permissible Load for Support Arms Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate Girder Clips, Clamping Thickness 4 - 20 mm. Girder Clips, Clamping Thickness 18 - 36 mm Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm Towing Arms End Caps. Insulators Notch-type Cable Lugs for Power Feed Line. Connector Cables for Current Collector Head 081209 Spring Assembly (lateral insertion) for Current Collector Head 081209 Tools and Assembly Accessories Mounting Comb 081045 Bending Device 081010. Contact Grease for Connection Points Replacement Parts Complete Current Collector Head for Current Collector 081209	
Permissible Load for Support Arms. Holders for Support Arm 32 × 30 × 2 for Screw Mounting with 2-holed Connector Plate. Holders for Support Arm 40 × 40 × 2.5 for Screw Mounting with 2-holed Connector Plate. Girder Clips, Clamping Thickness 4 - 20 mm Girder Clips, Clamping Thickness 18 - 36 mm Girder Clips, non-twistable, Clamping Thickness 6 - 25 mm Towing Arms End Caps. Insulators Notch-type Cable Lugs for Power Feed Line. Connector Cables for Current Collector Head 081209 Spring Assembly (lateral insertion) for Current Collector Head 081209 Tools and Assembly Accessories Mounting Comb 081045 Bending Device 081010 Contact Grease for Connection Points Replacement Parts	

System Description

The SinglePowerLine 0812 conductor rail system is used as a standard product to power bridge, portal and process cranes, but can also be used in a wide variety of other applications such as amusement rides and people movers. For over 35 years, it is a specified, reliable, and approved product in these applications.

As an insulated single-pole safety conductor rail, the contact-protected system meets requirements for conductor rails according to European (CE) and current international standards.

With different insulation materials, the 0812 system can be used with applications with conductor temperatures of up to 115 °C. This is equivalent to a constant ambient temperature of 85 °C at 100% duty cycle under continuous load. The conductor rail can temporarily withstand up to 125 °C.

For conductor materials, copper, stainless steel, and aluminum in sea-water resistant alloy with stainless steel tread are available as well our special material Copper**ECO II**I.

Copper**ECO II**I offers you an alternative between copper and aluminum-stainless steel with good corrosion protection for high current requirements, even during standstill operation.


With the partial expansion compensation system (compensation for thermal expansion in every rail part), systems up to 200 m in length can be implemented without the use of additional expansion elements.¹⁾

The safe, refined connector system and clip-on rail holders, in combination with optional mounting brackets, permit fast, economical assembly.

With the SinglePowerLine 0812 system and the 0813 product line extension for higher power ranges, Conductix-Wampfler offers a reliable, proven and robust solution for your application. Present around the world, our representatives and sales partners will be at your side from planning to implementation and service.

The plastic insulation of the conductor rails is colored safety yellow in accordance with general marking regulations, and the PE ("grounding") conductor rail components are green and yellow (continuous green color strips). Other colors are available upon request, with minimum order quantities.

Safety conductor rail with a finger-safe design. Testing of contact protection with IEC / UL / NEMA jointed test fingers (12 mm foreign bodies).

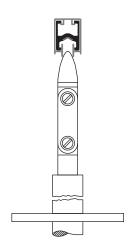

System Advantages:

- Available in different conductor materials
- Finger-safe design
- Used around the world
- Modular, expandable system

- Can be formed into circular slip rings and curves either at the factory or on site
- Self-extinguishing insulation compliant with UL-94 standard
- Yellow safety-color
- Designed for 100% duty cycle

according to European standards

- Self-aligning hanger clamps
- Saltwater-resistant
- Special seamless and corrosionresistant process for connection of aluminum rails and stainless steel contact surfaces

¹⁾ Take arrangement and ambient temperature into consideration.

Technical Data

Conductor Rails	Stainless Steel	Aluminum		Copper ECO III		Copper	
Туре	081217	081213	081214	08121C	08121D	081215	081216
Current load [A] At 100% duty cycle and 35 °C (rated value) At 60% duty cycle and 20 °C	25 32	200 260	320 380	200 260	320 380	250 320	400 480
Rated voltage [V]	690 (UL 600 V) -	min. 24 V / 1A (m	inimum load)				
Protection type	Vertical insertion	of Current Collecto	r: IP23 (DIN EN 605	29, VDE 0470-1);	horizontal insertion	of Current Collecto	r: IP21
Safety level	Finger-safe design	n (collector: finger-	safe entry only)				
Installation orientation	Horizontal with co	llector entry on bo	ttom side; collector	entry sideways opt	ional, for indoor use	e only	
Application area	Cranes, people m	overs, and similar	applications				
Environment	Indoors and prote	cted outdoors (see	protection class)		,	,	
Rated suspension spacing [m]	1.5 (59.1 inches)	typically 1.4 to 1.5	5				
Rail length [mm]	4000 (157.5 inch	es) (rated dimensi	ons at 20 °C / tolera	ance ± 3 mm)			
System length [m]	unlimited (depend	ling on power feed	l design, temperatur	e, and expansion o	onnectors)		
Exterior dimensions [mm]	18 x 26 (rail cross	s section)					
Rated rail spacing [mm]	50 (1.97 inches)	(minimum spacing	can be extended as	s needed)			
Travel speed [m/min]	600 m/min (straig	tht segments without	out interruptions, su	ch as Pickup Guide	es, Air Gaps, etc.)		
Expansion / expansion connectors	Compensation up	to 200 m (565 fee	et) in system length	above 200 m the	use of expansion el	lements is necessa	ry
Permitted ambient temperature 1)	-15 °C to +55 °C	(85 °C in heat-re	sistant design / PPE	+ SB) [deeper ten	nperatures on reque	est] ²⁾	
Maximum conductor temperature	+85 °C (115 °C i	n heat-resistant de	esign / PPE + SB, te	emporarily (t < 30 s	s) 125 °C)		
Storage temperature	-30 °C to +40 °C	(dry storage; avoi	d condensation)				
Conductor materials	Depending on typ our hybrid materia	, , , , , ,	oer, saltwater-resista or stainless steel	ant aluminum with	stainless steel cont	act surfaces,	
Rail insulation	Stabilized hardene	ed PVC (standard r	material) and PPE +	SB (heat-resistant	design for interior	use)	
Overvoltage category	III (EN 60664-1-2007/VDE0110-1)						
Installation- / Mounting tolerance	Distance between	isolation items an	nd steel structure: m	in. 10 mm (also se	e system sketch)		
Flammability / fire safety	Meets requirements for insulation materials in UL 94 V-1; Flame retardant and self-extinguishing (IEC 60695-11-10), halogen-free PPE-SB						
Local approvals	UL / CSA / GOST-	R					
Coloration	Rail insulation in s	safety warning cold	or RAL 1018 Zinc ye	ellow or RAL 1021	Rape yellow in heat	t-resistant design	

Program 0812:

Used for the power supply of cranes, construction of larger slip ring assemblies, transfer carriages, cable trays outside the public accessible area, mounted out of immediate reach (indoor) and weatherproof outdoor applications (IP2x).

- Current collectors oriented sideways or from below
- Horizontal mounting of the rails only (contact us for vertical mounting/application)
- Additional equipment needed for outdoor use, e.g. insulators, overhead covers, rail-heating elements, must be considered
- Touching the current collectors is prevented by appropriate measures on the plant side. Contact protection class IP23 (with vertical current collector insertion) or IP21 (with horizontal current collector insertion)

Relevant Standards	
DIN EN 60664-1, VDE 0110-1:2008-1	Insulation coordination for electrical equipment in low-voltage installations - Part 1: Principles, requirements and testing (IEC 60664-1:2007); German edition EN 60664-1:2007
DIN EN 60204-1, 60204-32, VDE 0113-1:2007-06	Safety of machines - electrical equipment of machines - Part 1: General requirements (IEC 60204 - 1:2005, modified); German edition EN 60204-1:2006
DIN EN 60529, VDE 0470-1:2000-09	Protection classes using housings (IP code): (IEC 60529:1989 + A1:1999): German edition EN 60529:1991 A1:2000

Subject to technical modifications

¹⁾ At temperatures below -10 °C, the mechanical stress due to physical limitation of the breaking strength must be limited.

²⁾ At low temperatures, temperature flexible cables should be used.

General Instructions

Application Area

This product is intended to supply electric power to mobile machines at the rated current range up to 400 A and voltages up to 690 V / 1000 V. Target applications are crane installations, people movers, and other rail systems, as well as storage/retrieval systems and similar applications with one or more mobile units. The production of arcs / curve elements can be done either at the factory or on-site using appropriate bending tools.

The insulation materials used are resistant to many ingredients used in the industrial environment, depending on concentration and exposure time. All metal parts are available in copper, stainless steel, or saltwater-resistant aluminum depending on construction type, and should be evaluated in accordance with the general suitability of these basic materials.

Before using 0812 conductor rails in critical environmental conditions such as galvanizing plants, pickling plants, compost works and locations with high concentrations of chemicals (e.g. solvents, aromatics, benzols, etc.), please contact the factory.

Layout

There are several decisive factors in the selection and layout of conductor rails. One main characteristic is the current load that actually occurs (total current to be expected during operation - not to be confused with the installed power or the resulting maximum current) and the resistance values of the system. Here we look at the longest segment between the power feed and the position of the moving vehicle during startup. The criterion in question is the resulting voltage drop. Depending on the conductor material and cross section, different losses can result for the same length and current. A conductor rail is properly dimensioned from the point of view of voltage drop when the drop lies within the permitted tolerance range, generally 2-5% and at most 10% including the connection feed cable.

Conductor rails are classified by their rated current. This corresponds to the maximum continuous current for the conductor rail and is based on the standard parameters of 30 °C ambient temperature and 100% duty cycle (according to IEC \geq 10 min ON). If the duty cycle or ambient temperature is lower, higher currents can be transmitted. Further information about the layout of conductor rails and corrections to rated current specifications is listed starting on page 22.

Electrical Safety

Insulated SinglePowerLine 0812 conductor rails are designed according to applicable international standards and guidelines, meet today's requirements for the safety of a conductor rail, and have contact protection compliant with DIN EN 60529 (protection class IP 21 / IP 23). They meet the general requirements for classification and evaluation defined in DIN EN 60204 part 32 - electrical requirements for hoisting machines.

Conductor rails and rail components have a high level of safety. With contact protection, direct contact between body parts and electrically conducting parts is prevented (finger protection with DIN VDE and EN / NEMA test fingers / 12 mm foreign bodies). The current collectors are also designed finger-safe when engaged in the rails, but in areas where they leave the rails, such as intersections and switch points, they must be additionally protected using power switches, covers or distance. Installations with voltages over 48 V AC and 60 V DC in publically accessible areas must be secured by covers, installation away from accessible areas, or other suitable means.

Installations in which the insulation characteristics may be reduced by conductive dust or moisture must be installed away from access by people and be marked as high-voltage electrical equipment with warning signs. In areas with high operating voltage (> 690 V) and installations in a highly contaminated environment with conductive dust or moisture, insulators must be used.

The single-pole system can be built with any number of poles and extended in a modular manner. Components for the protective conductor are marked in green or green/yellow and may not be used as phase components. Using installed parts and posi-

tion coding, it is impossible to engage the PE Current Collector into a phase pole, or to mix phases. We recommend laying out the PE ("grounding") contact redundantly with dual current collectors.¹⁾

Mechanical Safety

Please note that the layout of conductor rails and current collectors between fixed and moving system parts must maintain a safety spacing of at least 0.5 m to reduce the possibility of collisions between the moving machine and the rail system — or measures must be taken to prevent this risk. In exposed installation situations, for example over traffic ways, please ask for recommendations.

Use of Conductor Rails

Conductor rails are classified as components according to low voltage directive. The conductor rails of Program 0812 meet current standards and guidelines for the intended use of the components. For installation into the final product, the specifications valid for this product must be taken into consideration and you must proceed in accordance with the Machine Directive or with the guidelines valid for the place of installation.

Use outdoors

Outdoors, the conductor rail should be protected from environmental influences as much as possible. Use in high humidity and low temperature areas runs the risk of condensation, the formation of frost and ice build-up on the contact surfaces. For installations in this environment, the rails, in particular aluminum rails, must be equipped with an optional rail heater. Our sales department will be glad to assist you with the layout.


Approvals

This conductor rail product line meets the product parameters required for international use for these products and has been developed in accordance with the existing standards and guidelines in the EU and industrial markets. In addition to IEC/EN standard compliance, the product line also has local UL/CSA and GOST-R approvals.

¹⁾ Partly specified as standards

System Structure

Components and their use

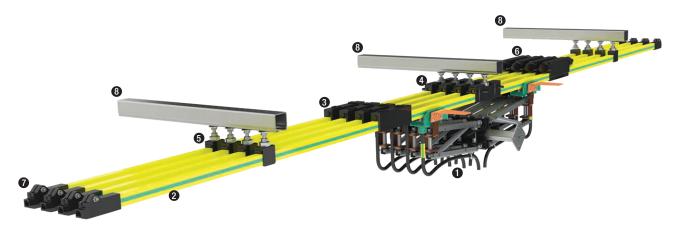

- Current Collector: Connects to the moving part of the system. Maintains positive contact with the rail as it slides. Available in different sizes as single or dual Current Collector.
- 2 Conductor Rails: Stable basic body of conductive material with contact-safe insulated profile.
- 3 Rail Connectors: Clamping connectors with insulated cap. Can only be removed with a tool (safety requirement).
- Anchor Clamps: Clamping element for anchoring the system. Forces the rail to expand to either side of the anchor point.
- Hanger Clamps: Freely rotating and thus self-aligning clip-on holder for quick, safe assembly. Mounting height adjustable.
 Allows the rail to slide during thermal expansion.
- 17 Power Feed Connectors: Used instead of a rail connector. Universal connection of single strands with outer diameters of up to 17 mm.
- Expansion Units (not shown): Changing temperature causes the conductor rail system to expand. To compensate for the expansion in systems longer than 200 m or systems with multiple fixed points or curves, expansion joints are used.
- **7** End Caps: Rail terminator as protection against accidental contact.
- Support Arms
- Pickup Guide (not shown): For areas in which the collector must be driven in or out of the conductor rail system.
- Air Gap (not shown): For galvanic isolation, for example of segments during maintenance.

System Advantages

- · Robust, tried and tested industrial design
- Safe conductor rail with contact protection (finger-safe design)
- Designed to national and international standards
- · High availability
- Expandable
- Partial compensation for thermal expansion
- Simple installation
- . Optional safety components / functions
- Rails in safety warning color RAL 1018/1021
- CE-compliant design
- · Available with any number of poles

System Structure

Insulated Conductor Rails

The standard product line offers the following conductor materials: electrolytic copper, aluminum, and our new special material Copper**ECO** III.

We therefore offer the ideal solution for every requirement:

- Copper, with its good conductivity and low voltage drop, is the ideal conductor, with restrictions in applications in aggressive or corrosive environments.


 Used when high amperage is needed, particularly in standstill operation..
- As a budget-priced alternative, aluminum rails with a stainless steel contact surface are also available. Using a special procedure, stainless steel and saltwater-resistant aluminum are firmly joined with no gap, combining the advantages of both materials, that is, good conductivity and low wear, without the disadvantages of other aluminum rails available on the market with stainless steel inserts.
- As another option, for low current and control signals, there are stainless steel rails available as well.
- The portfolio is complemented by our new special material Copper**ECO** | III. This innovation offers a significantly improved conductivity compared to aluminum-stainless steel and thus allows high power transmission even when the system is in standstill. Copper**ECO** | III is suitable for demanding outdoor environments including saltwater areas. Thereby we can offer an excellent price-performance alternative inbetween copper and aluminum-stainless steel.

The conductor rails consist of the conductive rail body and the protective insulation in a contact-safe design.

As insulation material, PVC is used in standard applications For higher ambient temperatures halogen-free PPE+SB is used.

Rated length: 4000 mm

Colour: Safety warning RAL 1018 (PVC) / RAL 1021 (PPE+SB)

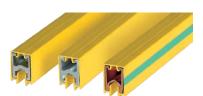



PH = Phase PE = Potential Earth ("grounding")

				NEW			
	Stainless steel	Aluminum (with stainless steel contact surface)		Conner FCO III		Copper	
Rated current (100% duty cycle)	25 A	200 A	320 A	200 A	320 A	250 A	400 A
Rated current (60% duty cycle)	32 A	260 A	380 A	260 A	380 A	320 A	480 A
Cu figure	_	_	_	_	_	0.59 kg/m	0.92 kg/m

Part No.	Standard insulation for ambient temperatures up to +55 °C						
PH	081217-4X11	081213-4X11*	081214-4X11*	08121C-4x11*	08121D-4x11*	081215-4X11	081216-4X11*
PE (green color stripes)	081217-4X12	081213-4X12*	081214-4X12*	08121C-4x12*	08121D-4x12*	081215-4X12	081216-4X12*

Part No.	Insulation for ambient temperatures up to +85 °C						
PH	081217-4X21	081213-4X21	081214-4X21	08121C-4x21	08121D-4x21	081215-4X21	081216-4X21
PE (green color stripes)	081217-4X22	081213-4X22	081214-4X22	08121C-4x22	08121D-4x22	081215-4X22	081216-4X22

Short lengths of 1, 2 and 3 m are available upon request for an additional price for cutting costs

Part No. for semistandard: 0812XX__ length X __ (length = 1 for 1 m, 2 for 2 m, and 3 for 3 m) short lengths upon request – example 1m: 0812xx-1X11

Technische Daten

Conductor cross section (mm²)	70	100	120	100	120	70	110
DC resistance [Ω/1000m] 20 °C	1.160	0.337	0.267	0.337	0.267	0.278	0.168
DC resistance [Ω/1000m] 35 °C	1.163	0.358	0.282	0.358	0.282	0.298	0.178
Impedance [Ω/1000m] 20 °C/50Hz	1.160	0.361	0.297	0.361	0.297	0.307	0.209
Impedance [Ω/1000m] 35 °C/50Hz	1.163	0.377	0.306	0.377	0.306	0.321	0.217
Weight [kg]	2.5	1.7	1.8	1.7	1.8	2.7	4.1

Min. bending radius horizontal

Upon request (depending on outdoor/indoor use, horizontal/vertical orientation and materials)

^{*} Standard range

System Structure

Comparison of different Conductor Rail Materials

	Aluminum-Steel	Copper ECO III	Copper		
			H		
Conductivity			Conductivity		
Corrosion resistance	Corrosion resistance				
Price			Price		
Suitable for corrosive environments	V	V	-		
Application requirements	Standard requirements	High amperage requirements, especially in standstill mode (e.g. crane hoist/AS/RS)	Highest requirements on current carrying capacity		
Application example					


Max. Current Carrying Capacity of Current Collectors (100 A) with different rail materials at 30° C ambient temperature

		Aluminum-Steel	Copper ECO III	Copper
a) moving (v > 10 m/min)	Current carrying capacity per current collector	100 A = I _{nenn}	100 A = I _{nenn}	100 A = I _{nenn}
b) brief standstill	Max. duration t _s of current carrying capacity during brief standstill *	5 minutes	15 minutes	(no limit)
D) Di lei Stantustin	Current carrying capacity per current collector	50 A = 50% I _{nenn}	100 A = I _{nenn}	100 A = I _{nenn}
c) standstill for a longer period (t $> t_s$)	Current carrying capacity per current collector	30 A = 30% I _{nenn}	80 A = 80% I _{nenn}	100 A = I _{nenn}

^{*} thereafter moving the current collector by at least 1 m / cooling off for at least the same duration as previous current load

Hanger Clamps

Hanger Clamps

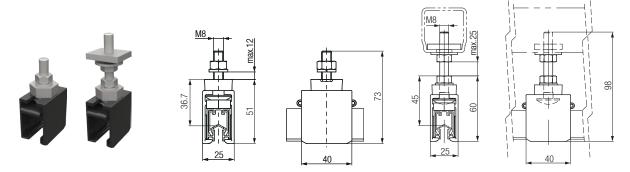

Suspension is carried out using freely swivelling clip-on Hanger Clamps that are self-aligning and permit low-friction slipping in case of thermal expansion. Hanger Clamps are available with hex nuts or square nuts for the mounting of Support Arms / C-rails (see installation accessories).

Note:


- Rated suspension spacing 1.5 m, typically 1.4 to 1.5 m
- Max. suspension spacing 1.5 m
- Minimum spacing from connectors or power feed 250 mm


	Part No.	Weight [kg]
Hanger Clamp galvanized with hex nut	081241-01*	0.050
Hanger Clamp galvanized with square nut	081243-01*	0.095
Hanger Clamp in stainless steel with hex nut	081241-02*	0.050
Hanger Clamp in stainless steel with square nut	081243-02*	0.095


^{*} Standard range


Hanger Clamps with Insulators



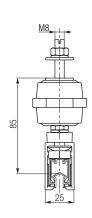

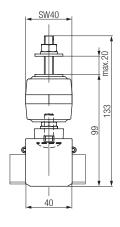

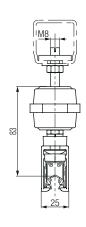

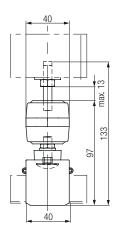

	Part No.	Weight [kg]
Hanger Clamp galvanized with hex nut	081241-11*	0.16
Hanger Clamp galvanized with square nut	081243-11*	0.20
Hanger Clamp in stainless steel with hex nut	081241-12*	0.16
Hanger Clamp in stainless steel with square nut	081243-12*	0.20

^{*} Standard range

Calculation Hint for Hanger Clamps:


Quantity n =
$$\frac{L_{\text{SYSTEM}}}{1.5 \text{ m (hanger distance)}} + 1 + \text{spare part}$$

Installation note

- Phase spacing with Insulators \geq 60 mm
- Hole drilled for mounting ø 9 mm

Compact Hanger Clamps and Anchor Clamps

Compact Hanger Clamps

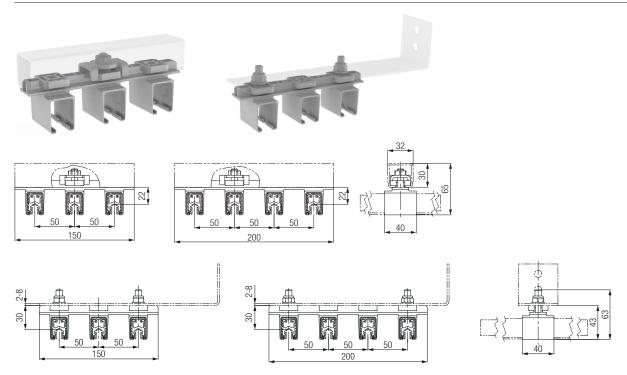


Compact Hanger Clamps for fast assembly of 3 or 4 rails indoors. Available for surface mounting or insertion into Conductix-Wampfler C-rails and mounting brackets in galvanized or stainless steel with 30 mm rated dimensions.

Part No.	Number of poles	Phase spacing [mm]	Variant	Weight [kg]
081246-350	0		For C-rails	0.123
081246-351	3	50	For extension arms	0.087
081246-450	4	50	For C-rails	0.138
081246-451	4		For extension arms	0.102

Note: In contrast to self-aligning rotating single Hanger Clamps, Compact Hanger Clamps and their substructure must be aligned exactly 90° to the rail to ensure free slipping of the rails during expansion. Not suitable for aggressive environments.

Anchor Clamps

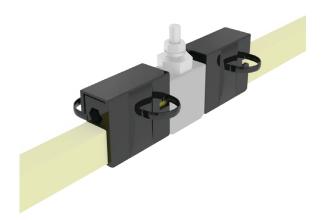

The rails are fixed in one place with Anchor Clamps and can expand freely from that point out. The fixed point is mainly for single feed applications attached close to the power feed or in the center of the conductor rail system. If Expansion Units are installed, please refer location in accordance with diagram 3 on page 15. If multiple fixed points are planned, for example at intersections or curves (natural fixed point), the segment between the fixed points must be decoupled using Expansion Units. Clamps are fastened with a clamping cone on the rail insulator.


Part No.	Туре	Weight [kg]				
081231-2*	Anchor Clamp	0.050				


- For each fixed point, order two Anchor Clamps per pole
- Not recommended for vertical applications


* Standard range

Rail Connectors and Power Feed Connectors

Rail Connectors (Splice Joints)

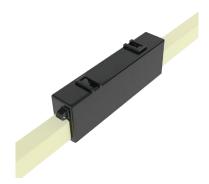

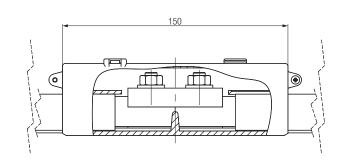

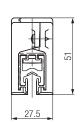


Rails are connected using compact screw connections. The rail connections must have exposed metal on all contact surfaces and be coated with a thin layer of contact grease (Part No. 080021) to protect against corrosion. When mounting clamping screws, use a torque wrench to achieve correct tightening torques.


Part No.	Designation		Weight [kg]			
081221-2*	Connectors for aluminum / Copper ECO III rails	Calvanizad	0.130			
081221-3*	Connectors for copper rails	Connectors for copper rails Galvanized				
081221-4*	Connectors for aluminum / Copper ECO III rails	0.140				
081221-5*	Connectors for copper rails	Stainless Steel	0.150			
081221-6	Connectors for stainless steel rails		0.180			
080021*	Contact grease, one 20 g tube (for approx. 200 connection points)		0.035			

^{*} Standard range

Power Feed Connectors



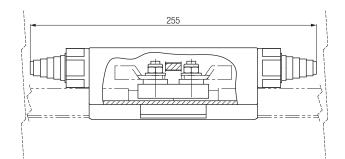

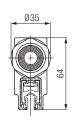

The power feed uses a power connector; these replace the normal Rail Connectors. Electrical connection is provided using projecting bolts and notch-type cable lugs (cable lugs not included; please order separately, see mounting accessories).

Note:

- Tightening torque max. 9.75 Nm
- Max. outer cable diameter 17.5 mm
- Use contact grease 080021

Part No.	Designation		Weight [kg]
081251-4*	Connectors for aluminum / CopperECO III rails		0.21
081251-5*	Power feed connector for copper rails	0.22	
081251-6	Power feed connector for stainless steel rails		0.25

^{*} Standard range

Notch-type Cable Lugs see page 31


The standard parts of the connectors are in stainless steel


The standard parts of the connectors are in stainless steel

End Caps and Air Gaps

End Caps



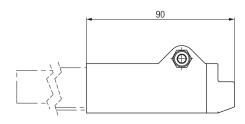

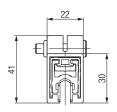


End Caps are used as a rail terminator and contact protection and are fastened to the rails using clamping screws.

Part No.	Designation		Weight [kg]
081271-2*	End Cap	Stainless Steel (DIN parts)	0.040

^{*} Standard range

To use End Caps in combination with accompanying heating / heating conductors: see assembly instructions

Air Gaps

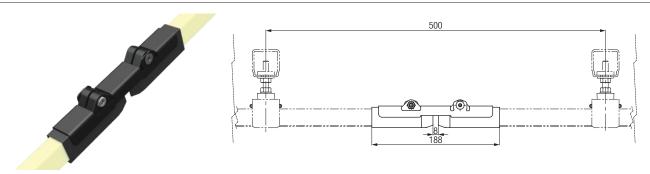


Air Gaps are used for the galvanic isolation of sections, such as maintenance segments that can be supplied with power and turned off separately. For each separation point, two Air Gaps must be mounted at a suitable distance to avoid power carryover through the Current Collectors.

Part No.	Designation		Weight [kg]
081294-2	Air Gap	Stainless Steel	0.040

Please note: Air Gaps are delivered as an assembly set (not pre-assembled).

Expansion Units

Expansion Units

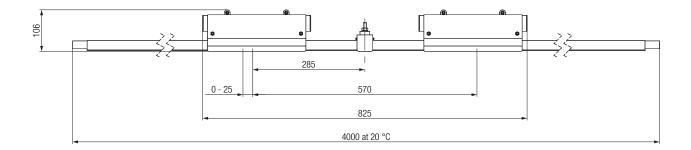

To compensate for changes in length due to temperature for systems > 100 m or segments connected between two fixed points such as Pickup Guides on both ends of the segment, or in curves (natural fixed points), expansion elements are needed to absorb the change in length. The expansion element has two expansion points, each of which can absorb 25 mm of expansion. The expansion elements / expansion unit parts are, like the rails, designed as 4 m standard components.

Note: The middle part between the two expansion segments must be supported using hanger clamps (not included – order separately). When using expansion units, the use of dual Current Collectors is recommended.

	Part No.							
Rails/	PH (P	hase)	PE (Poten					
rated current	Standard variant	Heat-resistant variant	Standard variant	Heat-resistant variant	Weight [kg]			
For aluminum rails 200 and 320 A	081261-4x2121*	081261-4X2221	081261-4X2122*	081261-4X2222	2.9			
For Copper ECO I I I 200 and 320 A	081261-4X21D1*	081261-4X22D1	081261-4X21D2*	081261-4X22D2	2.9			
or copper rails 081261-4X2131*		081261-4X2231	081261-4X2132*	1261-4X2132* 081261-4X2232				
For stainless steel rails 25 A	081261-4X2141	081261-4X2241	081261-4X2142	081261-4X2242	3.6			

Design: Fastening and DIN parts in stainless steel – rated length 4000 mm (13.12 feet). Hanger Clamps in the middle segment not included – please order separately! Delivery: completely pre-assembled at the factory. Adjustment of the two expansion gaps according to the table on page 15, depending on temperature values.

Layout notes

Changes in ambient temperature and intrinsic heating cause the conductor rails and the insulation to expand differently. The SinglePowerLine 0812 conductor rail system has a partial thermal expansion system. The difference in thermal expansion between the insulation and the rails is compensated for in each individual rail. For this reason, the insulation profile is specified shorter than the rail and the compensation takes place in the area of the connector caps without influencing the contact guard.

By using self-aligning, rotating Hanger Clamps, the rail line can expand without friction and thus be laid out up to a length of 200 m without additional Expansion Units. If the power feed is in the middle with a fixed point at the power feed, installations of up to 200 m can be laid out without expansion elements by allowing the segment to expand freely to each side for 100 m from the fixed point.

For installations of greater length, multiple fixed points such as Pickup Guides or curves that also have a fixed position due to a fixed point or mechanical attachment, expansion joints must be used to absorb the changes in length.

Pickup Guides are to be considered as fixing points.


Mounting instruction

The distance between insulating caps and steel construction should be at least 10 mm.

^{*} Standard range

Expansion Units

Expansion Units

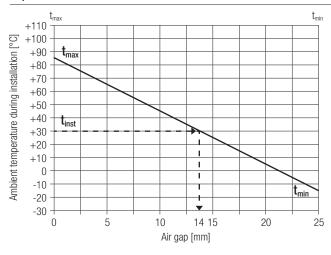

Legend:

t_{min} lowest temperature that occurs in the application

t_{max} highest possible working temperature in the application

- Draw a connecting line from t_{min} to t_{max}.
- 2. Draw the ambient temperature during installation t_{inst} as a horizontal line.
- Draw a vertical line down from the point of intersection of these two lines, and read off the air gap to be used during installation.

Example:

Temperature range: from -15 °C to +85 °C Ambient temperature during installation: +30 °C

Air gap: 14 mm per expansion point = 2×14 mm for the expansion element

Number of Expansion Units for systems over 100 m in length / 200 m with middle power feed

For rail conductor installations over 200 m in length, Expansion Units must be installed at specific intervals, as shown in Diagram 3. In complicated curves and other special installations, as well as for fixed point arrangements at the end of the system, special intervals must be used. Please contact us.

	er of Ex- n Units		1			2			3			4			5		Interm	ediate le	ength a
Materia	al	SS	AI*	Cu	SS	AI*	Cu	SS	Al*	Cu	SS	Al*	Cu	SS	Al*	Cu	SS	AI*	Cu
							Total I	ength of	the con	ductor r	ail [m]								
-	10	400	400	400	600	600	600	800	800	800	1000	1000	1000	1200	1200	1200	200	200	200
	20	400	304	347	600	408	494	800	512	641	1000	616	788	1200	720	935	200	104	147
	30	340	270	298	480	340	396	620	410	494	760	480	592	900	550	690	140	70	98
	40	304	252	274	408	304	348	512	356	422	616	408	496	720	460	570	104	53	74
t_{ges}	50	283	242	258	366	284	316	449	326	374	532	368	432	615	410	490	83	42	58
\triangleleft	60	270	235	249	340	270	298	410	305	347	480	340	396	550	375	445	70	35	49
	70	260	226	242	320	256	284	380	284	326	440	312	366	500	340	410	60	28	42
	80	252	226	236	304	252	272	356	278	308	408	304	344	460	330	380	52	26	36
	90	246	223	232	292	246	264	338	269	295	384	292	328	430	315	360	46	23	32
	100	242	220	229	284	242	258	326	263	287	368	284	316	410	305	345	42	22	29

SS = stainless steel, AI = aluminum, Cu = copper

*expansion of Copper**ECO** III material comparable to Aluminum-stainless steel

$$\triangle t_{ges} = \triangle t U + \triangle t_{sw}$$

 $\Delta t U$ = Temperature range of the ambient temperature

 Δ $t_{\text{\tiny SW}}=$ Temperature increase due to electric current (electrical thermal load)

Recommended values for Δt_{sw} :

10 °C up to 40% duty cycle


20 °C up to 65% duty cycle

30 °C up to 100% duty cycle

For longer systems than those in the table above, use:

$$\frac{L - 200}{a}$$
 = number of Expansion Units

Note: Intersection Pickup Guides and curves are fixed points, so these areas must also be taken into consideration when laying out the system.

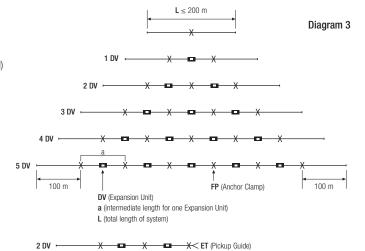


Pickup Guides for Intersections

Only for Current Collectors 081206... / 081208...

For areas in which the collector must be driven in or out of the conductor rail system, Pickup Guides are used in combination with Current Collectors provided for this purpose. The speed for Pickup Guide entry must not exceed 60 m/min and Pickup Guides must be considered wearing parts.

Installation tolerances must be taken into consideration. Simultaneous alignment gaps with maximum tolerances in the X and Y directions are not permitted.

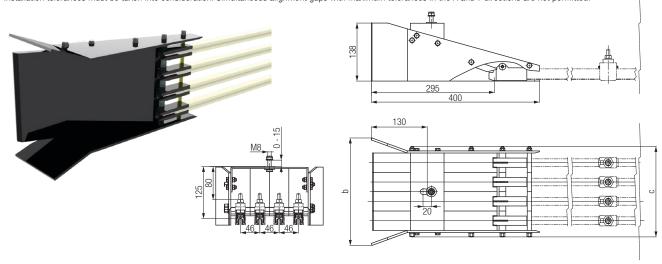

Dimensions [mm]	Number of poles							
	1	2	3	4	5	6		
b	120	166	212	258	304	350		
С	78	124	170	216	262	308		

- The Pickup Guide centers the Current Collector with a maximum lateral and vertical alignment tolerance of ± 25 mm.
- Settings of less than $\pm 10~\text{mm}$ are recommended.
- In installations with Pickup Guides, a corresponding number of Current Collectors must be available, and mounted in intervals that ensure that just the necessary number of Current Collectors needed for momentary power requirements are in use.


The user must ensure that the Current Collectors between the Pickup Guides are disconnected from power or are protected against accidental contact.

Part No.	Type of fastening elements: stainless steel	Weight [kg]
081281-12	1-pole Pickup Guide	0.850
081281-22	2-pole Pickup Guide	1.200
081281-32	3-pole Pickup Guide	1.550
081281-42	4-pole Pickup Guide	1.900
081281-52	5-pole Pickup Guide	2.100
081281-62	6-pole Pickup Guide	2.300

Installation note

The middle distance between two conductors is 50 mm. This is reduced to 46 mm using the last Hanger Clamps before the Pickup Guide in order to ensure that the Current Collector enters the Pickup Guide precisely. The Pickup Guide is delivered complete with End Caps. The End Caps are pushed onto the rails with a soft-head hammer until they hit the end stops. The clamping screws are then tightened firmly. Keep distance of 750 mm between the Pickup Guide and the first Hanger Clamp.

Hanger Clamp spacing for installations with Pickup Guides

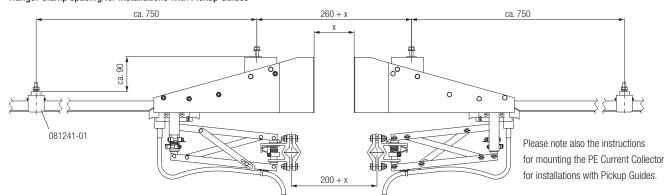

Current Collectors 081209...

Not suitable for Pickup Guides


Types of Construction

For the SinglePowerLine 0812 system there are two basic types of Current Collectors available. In addition to the smaller 081209-xxx variant in plastic, there is also a robust metal parallel arm type available that has proved useful for crane installations. Both types are available as single and dual Current Collectors and are fastened to a Towing Arm with clamps.


Current Collectors (Plastic Arm Type)

Plastic collectors are used in warehouse systems, EOT cranes, and amusement park installations. For installations with one direction of movement, individual Current Collectors are towed to reduce wear. By changing the force introduced into the stabilization springs on the Current Collector head, the head is pretensioned and works against the slanted wear. In installations that move in both directions, such as crane runways or transfer cars, this compensation takes place automatically. Here, the variant for reversible operation is used.


Single Current Collector set up for reversible operation

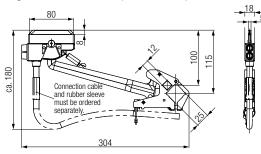

Dual Current Collector set up for reversible operation

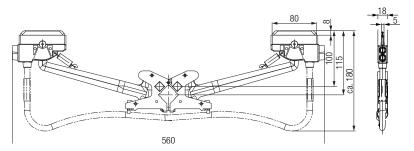

Mounting of Tension Springs

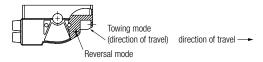

Note: Leave sufficient room in the installation for free movement of the cables. When using horizontal insertion, the weight forces of the Current Collectors must be equipped with compensation springs (For Towing Arms see page 30, for Accessories and Cables see page 31).

Technical data

ooiiiioai aata					
Max. power capacity in straight and curved segments (radius > 1800 mm)	80 A (for aluminum rails in standstill mode at 100% duty cycle: 40 A)	160 A (for aluminum rails in standstill mode at 100% duty cycle: 80 A)			
Max. current capacity in curved segments (bending radius from 1000 mm - 1800 mm)	40 A (with special carbon brush 081001-15) (for aluminum rails in standstill mode at 100% duty cycle: 20 A) ¹⁾				
Max. travel speed	600 m/min; higher travel speeds upon request (straight segment without Pickup Guides)				
Pressing force	10 N				
Lateral deviation	max. ± 50 mm				
Working stroke in insertion direction	max. ± 50 mm				
Connection cable	onger connection cable upon request;				
Distance between the Support arm axis and contact surface of the rail (rated installation dimensions)	115 mm (see system schematic on page 25)				

Single Current Collector

Dual Current Collector

		80) A		16			
Variant	Operation: vertical	PH (Phase)	PE (Potential Earth)	Weight [kg]	PH (Phase)	PE (Potential Earth)	Weight [kg]	
		Part No.			Part No.			
Fastening elements	Reversible operation	081209-012*	081209-022*	0.300	081209-2 × 012*	081209-2 × 022*	0.520	
galvanized	Towing operation	081209-013*	081209-023*	0.300	081209-2 × 013*	081209-2 × 023*	0.520	
Fastening elements	Reversible operation	081209-112	081209-122	0.300	081209-2 × 112	081209-2 × 122	0.520	
in stainless steel	Towing operation	081209-113	081209-123	0.300	081209-2 × 113	081209-2 × 123	0.520	

Connection cables not included - order separately from page 31


Note: The connection cables must be highly flexible to ensure free movement of the Current Collectors and be secured with the cable binder on the Current Collector in such a way that no tension or torsion forces are transmitted to the Current Collector head.

¹⁾ Max. Current load depending on the cable type, ambient temperature and installation method.

^{*} Standard range

Current Collectors

Current Collectors (Parallel Arm Metal Type)

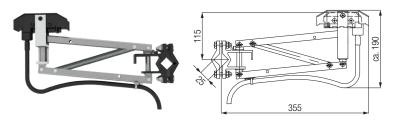

Parallel arm type Current Collectors come in a fully metallic design and are available as single or dual Current Collectors. PE Current Collectors are color-marked with a green Current Collector head and provided with a deflector to prevent insertion into a phase rail.

Horizontal insertion = insertion into the rail from the side Vertical insertion = insertion into the rail from underneath

Technical data


icciiiicai uata	
Max. current capacity in straight and curved segments (bending radius > 1800 mm)	100 A (for aluminum rails in standstill mode at 100% duty cycle: 50 A)
Max. current capacity in curved segments (bending radius from 1000 mm - 1800 mm)	40 A with radius brushes (upon request) (for aluminum rails in standstill mode at 100% duty cycle: 20 A) ²
Max. travel speed	600 m/min (without rail breaks and curves); higher travel speeds upon request
Pressing force	20 N
Lateral deviation	max. ± 50 mm
Working stroke in insertion direction	max. ± 50 mm
Connection cable	16 mm², 1.5 m long, high-flexibility; longer connection cable available upon request; avoid connection cables > 3 m and provide terminal boxes for service and replacement. (SAP CONFIG 3054705)
Distance between Support arm axis and contact surface of the rail (expected dimension)	115 mm

Towing Arms, see page 30


	Part No.							
Туре	PH (P	hase)	PE (Poten	Weight [kg]				
1,100	Fastening elements galvanized			Fastening elements in stainless steel	Holgiit [kg]			
Current Collector 100 A with vertical insertion	081205-01*	081205-11*	081205-02*	081205-12*	1.150			
Current Collector 100 A with vertical insertion for intersection ¹⁾ with Pickup Guides	081206-01*	081206-11*	081206-02*	081206-12*	1.260			
Current Collector 100 A with horizontal insertion	081207-01	081207-11	081207-02	081207-12	1.185			
Current Collector 100 A with horizontal insertion for intersection ¹⁾ with Pickup Guides	081208-01	081208-11	081208-02	081208-12	1.265			

¹⁾ Current Collectors for intersections are used if the path of the conductor rail installation is interrupted by branch tracks, crossing beams, etc. These Current Collectors are equipped with a middle centering device and are used with Pickup Guides.

Installation spacing for Current Collectors

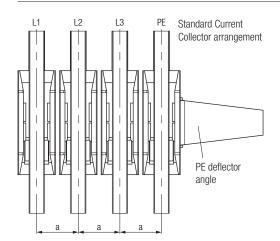

Center spacing a	[mm]
Standard Current Collector arrangement	50
Offset Current Collector arrangement	40
Current Collector arrangement when using Pickup Guides	50

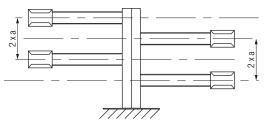

Offset Current Collector arrangement


^a Max. Current load depending on the cable type, ambient temperature and installation method.

^{*} Standard range

Current Collectors

Dual Current Collectors (Parallel Arm Metal Type)



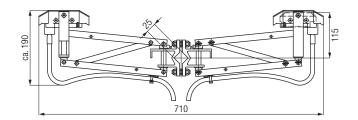

Technical data

lecinical data	
Max. current capacity in straight and curved segments (bending radius > 1800 mm)	200 A (for aluminum rails in standstill mode at 100% duty cycle: 100 A)
Max. current capacity in curved segments (bending radius from 1000 mm - 1800 mm)	40 A with radius brushes (upon request) (for aluminum rails in standstill mode at 100% duty cycle: 20 A)
Max. travel speed	600 m/min; higher travel speeds upon request (straight segment without Pickup Guides)
Pressing force	20 N
Lateral deviation	max. ± 50 mm
Working stroke in insertion direction	max. ± 50 mm
Connection line	16 mm², 1.5 m long, high-flexibility; longer connection cable available upon request; avoid connection cables > 3 m and provide terminal boxes for service and replacement. (SAP CONFIG 3054707)
Distance between Support arm axis and contact surface of the rail (expected dimension)	115 mm

Towing Arms, see page 30

	Part No.						
Туре	PH (P	hase)	PE (Poten	Weight [kg]			
турс	Fastening elements galvanized	Fastening elements in stainless steel	Fastening elements galvanized	Fastening elements in stainless steel	Weight [kg]		
Current Collector 200 A with vertical insertion	081205-2 × 01*	081205-2 × 11*	081205-2 × 02*	081205-2 × 12*	2.300		
Current Collector 200 A with vertical insertion for intersection ¹⁾	081206-2 × 01*	081206-2 × 11*	081206-2 × 02*	081206-2 × 12*	2.520		
Current Collector 200 A with horizontal insertion	081207-2 × 01	081207-2 × 11	081207-2 × 02	081207-2 × 12	2.370		
Current Collector 200 A with horizontal insertion for intersection ¹⁾	081208-2 × 01	081208-2 × 11	081208-2 × 02	081208-2 × 12	2.530		

¹⁾ Current Collectors for intersections are used if the path of the conductor rail installation is interrupted by branch tracks, crossing beams, etc. These Current Collectors are equipped with a middle centering device and are used with Pickup Guides.

Order code for Current Collectors with custom cable length 08120x - 2 x P x L

x = Current Collector type (5,6,7, or 8) L = cable length in whole meters — example for 3 m connection cable: 081206 - 2 x P x 3






^{*} Standard range

Current Collectors – Installation Instructions


Installation of the PE conductor Current Collector for installations without Pickup Guides

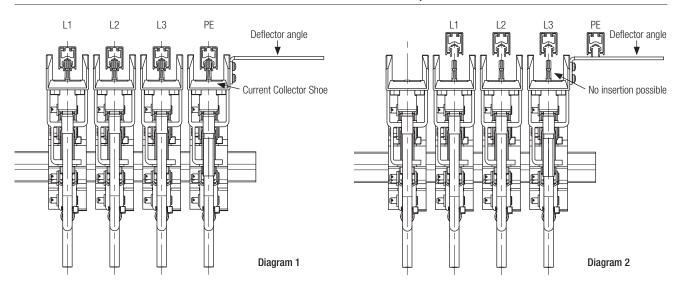

Non-interchangeability of PE (Potential Earth) conductor Current Collectors

To comply with safety standards, Current Collectors for PE rails must be designed in such a way that they are not easily interchangeable with other Current Collectors. When determining the position of the PE conductor, you must take into consideration that the standard PE conductor Current Collector (with deflector angle) can only be mounted on the outside, since the deflector angle is fastened onto the exposed side of the PE conductor Current Collector Shoe. The deflector angle ensures that the PE conductor Current Collector can never come in contact with a phase line (see Diagram 2).

Installation of the PE conductor Current Collector for installations with Pickup Guides

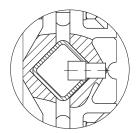

In installations with intersections, it is impossible to move the standard PE conductor Current Collector (with deflector angle) through the Pickup Guide. Thus the PE conductor Current Collector is used for intersections whose holders are equipped with a bolt for the Towing Arm. This fixes the position of the PE conductor Current Collector by being inserted into a hole drilled into the Towing Arm using the Drilling Jig listed below.


This ensures that the PE conductor Current Collector can only be mounted in the place provided for it.

Drilling Jig 08-W100-0206

To comply with regulations and guidelines, installations with Pickup Guides must have a hole drilled into the Towing Arm 020195 using Drilling Jig 08-W100-0206, which is then used to hold the bolt on the PE conductor Current Collector.

Installation note:

The phase Current Collectors needed are lined up on the preassembled Towing Arm 020195 and adjusted to the conductor rails. The next-to-outside phase Current Collector is used as a stop for the Drilling Jig. The Drilling Jig must be attached so that the drill sleeves point outwards – see illustration below. In this position, the mounting spacing is 50 mm.

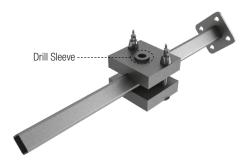

Туре	Part No.	Weight [kg]
Drilling Jig	08-W100-0206	0.700



Dimensioning and Layout of Conductor Rail System

The dimensioning and layout of a conductor rail system is done as follows:

- A: Determine the load current
- B: Select the rail type
- C: Check the voltage drop for the selected rail type
- D: Check of ambient conditions
- E: Select accessories and Current Collectors

A. Determining the load current (total rated current /NG)

To determine the total expected load current, individual currents of the highest draw consumers that can operate simultaneously are added up. If the entire installed power is summed, the rail capacity will be over-specified. To avoid overdimensioning, the individual currents are evaluated for simultaneity. To optimize the system, it is always wise to consider individual consumers that cannot be operated simultaneously (e.g. a crane's slewing gear can only be operated when the crane trolley is stopped), and then only the consumer (the slewing gear or the trolley) with the higher current consumption is used.

If multiple units are installed on a single track, for example three cranes on one crane track, the probability of simultaneous operation in the same load should be used to calculate the current. In practice, the following simple table has proved useful in calculating the total rated current /NG for multiple consumers:

Selection help for standard EOT crane applications


Number of cranes	I _N of the most powerful motor of all the cranes I _N *	I_N of the second most powerful motor of all the cranes I_N^*	I_N of the third most powerful motor of all the cranes I_N^*	I_N of the fourth most powerful motor of all the cranes I_N^*
1	×	×		
2	×	×	×	
3	×	×	×	
4	×	×	×	×
5	×	×	×	×
According to work with 2 cranes	×	×	×	×

^{* =} For dual drives, use $2 \cdot I_N$

B. Rail current capacity depends on duty cycle and ambient temperature

The specified rated currents for the conductor rail are based on the definitions in European standards and are relative to an ambient temperature of 35 °C and a duty cycle (DC) of 100%. If the duty cycle is shorter, such as might be the case for a crane with finite movement, the rail can conduct higher current than the rated current.

Adjusting the rail rated current for shorter duty cycles

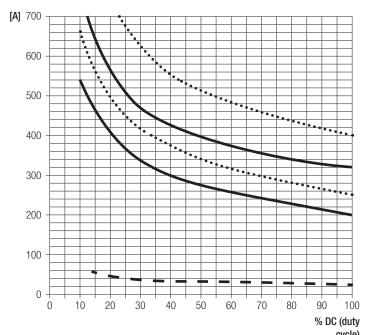

The load current of the conductor rail can be increased for shorter duty cycles. **Note:** When comparing the rated currents of rails from different manufacturers, always take into consideration the reference ambient temperature and the duty cycle! Consumptions with 100% duty cycle such as lighting, air conditioning or magnetic grippers must be taken into consideration. 100% DC \triangleq t \geq 10 min. (according to EN standards)

400 A Copper rails

320 A Aluminum rails

250 A Copper rails

200 A Aluminum rails

25 A Stainless Steel rails

Dimensioning and Layout

If the ambient temperatures differ from the standard value of 35 °C, the loads must be adjusted. At lower temperatures, the heat release (convection) is better and the rail can handle higher current loads. At higher temperatures, the release of thermal energy to the surrounding air is slower and the load must therefore be reduced.

Use with voltages under 230 V must be tested in each specific case. The minimum current should be 1A. The corresponding values f are taken from the following table:

Ambient temperature			35 ℃	40 °C	45 °C	50 °C	55 °C	60 °C	65 °C	70 °C	75 °C	80 °C	85 °C
	Stainless steel rails		1.0	0.97	0.94	0.91	0.88						
Standard insulation	Aluminum rails*	f _A	1.0	0.92	0.81	0.76	0.68						
modiation	Copper rails		1.0	0.93	0.87	0.82	0.78						
	Stainless steel rails						1.0	0.97	0.94	0.91	0.88	0.85	0.83
Heat-resistant insulation	Aluminum rails*	f A					1.0	0.92	0.81	0.76	0.68	0.63	0.59
modication	Copper rails						1.0	0.93	0.87	0.82	0.78	0.74	0.72

^{*} The correction factors for Copper**ECO** III correspond to those for aluminum-stainless steel

 $I_{SCHL G zul} = I_{SCHL G zul 35 \circ C} \cdot f_A$

I_{SCHL} = rated current of the conductor rail for the specific ambient temperature

C. Calculating the voltage drop

After selecting the rail type based on the calculated total current depending on duty cycle and ambient temperature, the voltage drop must be checked. The calculated voltage drop must be under the value specified by the customer. Typical values here are 2-5%, or 10% in exceptional cases. If the voltage drop is too high, the voltage might be too low for all the drives to start.

The following formulas are used for the calculation:

For direct current	$\Delta U_{35^{\circ}\text{C}} = 2 \cdot I \cdot I_{\text{G}} \cdot \text{R}$	[V]	\triangle $U_{35^{\circ}\mathrm{C}}=$ voltage drop at 35 °C $I_{6}=$ total current	[V] [A]
For alternating current	$\Delta U_{35\text{°C}} = 2 \cdot I \cdot I_6 \cdot Z$	[V]	R = resistance of the conductor rail	$[\Omega/m]$
. or alternating earrone	△ 0 35 °C − 2 7 °G 2	[*]	Z = impedance of the conductor rail	[Ω/m]
For three-phase power	$\triangle U_{35\text{°C}} = \sqrt{3} \cdot I \cdot I_6 \cdot Z$	пл	/= feed length	[m] ¹⁾
r or unee-priase power	$\triangle U_{35} \circ C = A_3 \cdot I \cdot I^{G} \cdot Z$	[V]	L = conductor rail length	[m]

Note: I_G here is the portion of the load current "drawn" during start-up.

1) see feed variants

This consists of the basic load, like lighting and air conditioners, and the start-up currents of the drives I_A .

For start-up current, the following applies: Three-phase asynchronous drive in direct start $I_A = I_N \times 5$ to 6 (up to max. 21 kW permitted) $I_N =$ Nominal current

Slip ring rotor motor $I_A = I_N \times 2 \text{ to } 3$

 $I_A = Total$ current consumption

when starting

Frequency converter $I_A = I_N \ x \ 1.4 \ to \ 1.8$

The length I is the distance between the power feed and end position of the conductor rail segment on which the consumer is located when starting. If the average ambient temperature is significantly over 35 °C, the voltage drop must be calculated using the following formulas:

$$\Delta U \sigma = \frac{\Delta U_{35 \, ^{\circ}\text{C}}}{f \text{V}} \qquad \text{[V]}$$

$$\Delta U \sigma = \text{voltage drop at higher ambient temperature than 35 \, ^{\circ}\text{C}} \qquad \text{[V]}$$

$$\Delta U \sigma \% = \frac{\Delta U \sigma}{U_{\text{N}}} \cdot 100 \qquad \text{[\%]}$$

$$U_{\text{N}} = \text{rated voltage [V]}$$

$$f \text{V} = \text{reduction factor}$$

To calculate the value fv, the working temperature must first be calculated.

$$\sigma_{\rm AT} = \text{working temperature [°C]}$$

$$\sigma_{\rm UT} + \Delta \sigma_{\rm SW} = \sigma_{\rm UT} + 30 \ [°C]$$

$$\sigma_{\rm UT} = \text{ambient temperature increase due to current heating [°C]}$$

$$\Delta \sigma_{\rm SW} = \text{temperature increase due to current heating [°C]}$$
 (use a constant +30 °C)

The value fv is based on the working temperature and the conductor rail selected and should be taken from the table "Correction factors for the voltage drop ΔU for different ambient temperatures" on page 24.

Dimensioning and Layout


Correction factors for the voltage drop $\triangle U$ at different ambient temperatures

Ambient temperature	Ambient temperature			40 °C	45 °C	50 °C	55 °C	60 °C	65 °C	70 °C	75 °C	80 °C	85 °C
Working temperature / cond	uctor temperature		65 °C	70 °C	75 °C	80 °C	85 °C	90 °C	95 °C	100 °C	105 °C	110 °C	115 °C
	Aluminum rails 200 A*		0.916	0.904	0.891	0.879	0.868						
	Aluminum rails 320 A*		0.921	0.909	0.897	0.886	0.875						
Standard insulation	Copper rails 250 A	fv	0.912	0.899	0.887	0.874	0.862						
	Copper rails 400 A		0.927	0.916	0.905	0.894	0.883						
	Stainless steel rails 25 A		0.993	0.991	0.990	0.989	0.988						
	Aluminum rails 200 A*						0.868	0.856	0.845	0.834	0.824	0.813	0.803
	Aluminum rails 320 A*						0.875	0.864	0.853	0.843	0.833	0.822	0.813
Heat-resistant insulation	Copper rails 250 A	fv					0.862	0.850	0.838	0.827	0.816	0.805	0.795
	Copper rails 400 A						0.883	0.873	0.863	0.853	0.843	0.833	0.824
	Stainless steel rails 25 A						0.988	0.986	0.986	0.985	0.984	0.982	0.981

If the voltage drop is too high, then either the number of power feeds must be increased or a larger conductor rail must be selected. Additional power feeds are usually a better technical and commercial alternative than larger conductor rails or costly copper rails.

Working temperature: permanent rail temperature occurring at rated current (ambient temperature + electrical thermal heating) Max. working temperature: short-term (t < 30 sec) 125 °C (in heat-resistant variant)

Possible power feed locations: The power feed arrangement must be appropriate for the specific case, since the voltage drop is calculated with the feed length "/" that falls between the power feed and the end of the conductor rail. The following power feed options are normally used:

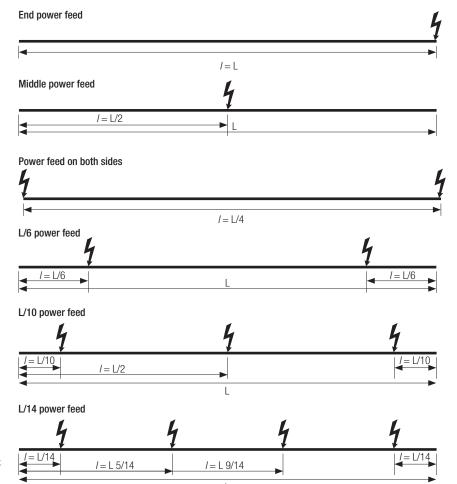


I = L
With an end power feed
I = L/2
With a middle power feed
I = L/4
For power feeds at both ends
I = L/6
For two power feeds each L/6 from the ends
I = L/10
For a power feed in the middle and L/10 from each end
I = L/14
I = L/

L = length of the conductor rail [m]

^{*} The correction factors for Copper**ECO** | II | correspond to those for aluminum-stainless steel


System Layout

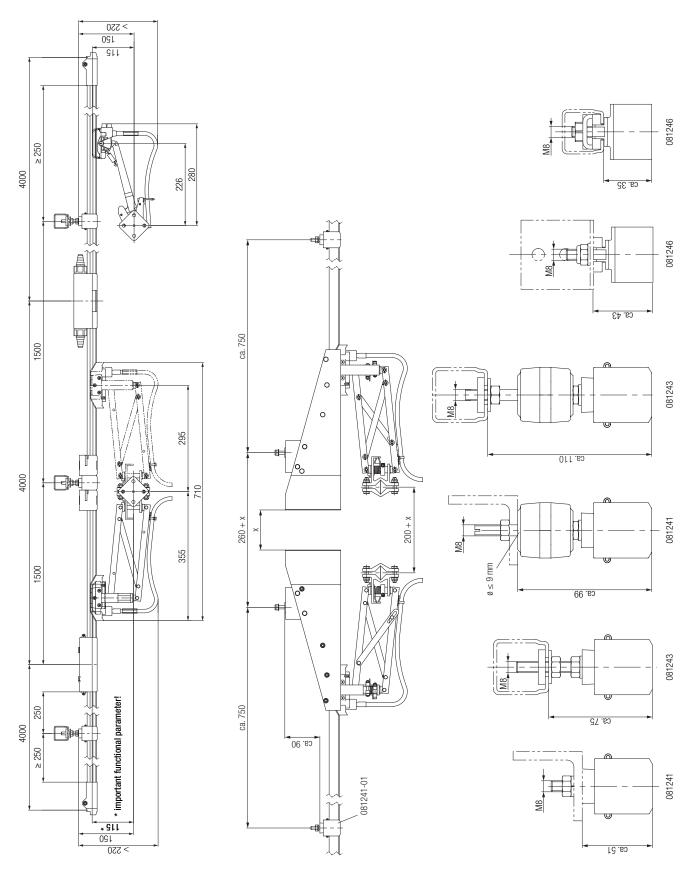


Note: Used outdoors, the conductor rail system must be protected from direct weather exposure as much as possible, for example by installing it under a beam and covering the Current Collector (to protect it from snow and ice). Outdoors, insertion of the Current Collector from below is generally preferable to lateral insertion. Also, the use of insulated holders is recommended for outdoor installations. If there is any risk of formation of frost or ice, specify optional heating conductors in the rail to de-ice the rail and prevent rail damage due to sparking effects on frozen rails. Distance between insolation elements and steel structure min. 10 mm.

System Layout

Layout Schematic and Component Overview

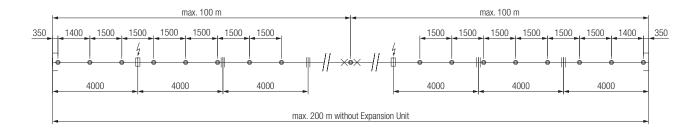

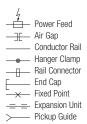

Middle distance between two conductors	Standard Current Collector arrangement	Offset Current Collector arrangement	Current Collector arrangement for installations with multi-poled Pickup Guides*
Minimum distance a [mm]	50	40	50

^{*} See mounting instructions for Pickup Guides. Minimum distance between Hanger Clamps, Joints, Pickup Guides, Air Gaps, etc. is 250 mm! Minimum distance for Power Feeds is 350 mm.

Example Material Overview / Example Order

Here is a typical crane conductor rail system that is 52 m in total length, with 4 poles, 320 A, with all accessories, Current Collectors and Support Arms. The required Bill of Materials is listed below. The order quantity should be increased by an assembly reserve for the parts marked with an (x).

Part Description	Part No.	Quantity Needed
Conductor Rail "Phase" 4 m long	0812-4 × 11	39
Conductor Rail "PE" 4 m long	0812-4 × 12	13
Hanger Clamp (x)	081243-01	152
Anchor Clamp	081231-1	8
Rail Connector (x)	081221-2	52
Power Feed	081251-2	4
Notch-type Cable Lug 16 mm ² (x)	080051-16	4
End Cap (x)	081271-1	8
Current Collector "Phase"	081205-01	3
Current Collector "PE"	081205-02	1 (Recommendation: 2 units or dual Current Collector)
Support Arm	020195-400	1
Support Arm	020185-0500	38
Girder Clip	020180-08	76
Mounting Comb	081045	1
Conductix-Wampfler Contact Grease (x)	080021	1
Copper Graphite Shoe (replacement part) (x)	081001-11	4


Note

To avoid strand breakage due to external force on the Current Collector, the connection cable should be fine-stranded and highly flexible. The transition to the customer-provided fixed cabling should be directly behind the Current Collector in a terminal box provided by the customer. Long connection cables to Current Collectors should be avoided to reduce maintenance problems.


Support Arms 30 x 32 x 2 mm – also suitable for Compact Hanger Clamps



Part No.	L ₁ [mm]	L ₂ [mm]	Material	Weight [kg]
020185-0250	250	200		0.390
020185-0315	315	260		0.500
020185-0400	400	340	Galvanized steel	0.625
020185-0500	500	340	Steel	0.780
020185-0630*	630	340		0.980

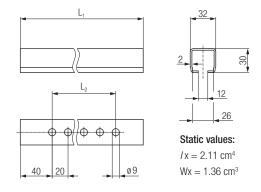

^{*} Standard range

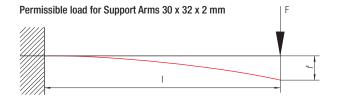

				1[m]			
	0.25	0.32	0.40	0.50	0.63	0.80	1.00	1.25
F [daN]*	76.0	59.5	47.5	38.0	30.0	24.0	19.0	15.2
f [cm]	0.08	0.13	0.20	0.32	0.50	0.80	1.25	2.23

^{*} Calculated with $\sigma = 140 \text{ N/mm}^2 \text{ voltage}$ f = as

f = associated max. deflection

Support Arms $40 \times 40 \times 2.5$ mm – not suitable for Compact Hanger Clamps



Part No.	L ₁ [mm]	L ₂ [mm]	Material	Weight [kg]
020186-0250	250	200		0.625
020186-0315	315	260		0.785
020186-0400*	400	340	Galvanized	1.000
020186-0500	500	340	steel	1.250
020186-0630*	630	340		1.575
020186-0800	800	340		2.000
* Standard range				


Permissible load for Support Arms 40 x 40 mm

I [m] 0.50 1.25 0.25 0.32 0.40 0.63 0.80 1.00 F [daN]* 164.5 128.5 103.0 82.5 65.5 51.3 41.0 32.9 0.06 0.10 0.16 0.63 1.68

^{*} Calculated with $\sigma = 140 \text{ N/mm}^2 \text{ voltage}$ f = associated max. deflection

Holder for Support Arms 30 \times 30 \times 2 for screw mounting with 2-holed connector plate




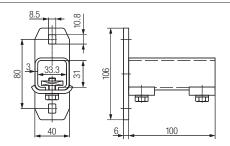

Part No.	Description	Suitable for Support Arm	Weight [kg]
020280	Galvanized steel	020185, 020275	0.700

Holder for Support Arms 30 \times 30 \times 2




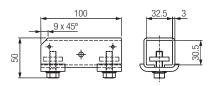

Part No.	Description	Suitable for Support Arm	Weight [kg]
020285	Unplated steel with galvanized hardware	020185, 020275	0.420

Holder for Support Arms $40 \times 40 \times 2.5$ for screw mounting with 2-holed connector plate




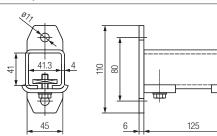


Part No.	Description	Suitable for Support Arm	Weight [kg]
020282	Galvanized steel	020186, 020276	1.000

Holder for Support Arms 40 \times 40 \times 2.5



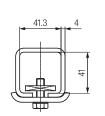

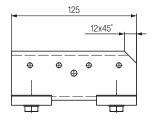

Part No.	Description	Suitable for Support Arm	Weight [kg]
020286	Unplated steel with galvanized hardware	020186, 020276	0.730


Girder Clips, clamping thickness 4 - 20 mm



Part No.	Description	Weight [kg]		
020180-08*	Galvanized steel	0.150		
020480-08	Stainless steel (V4A)	0.150		

^{*} Standard range

Clamping thickness s [mm]	4	6	8	10	12	16	20
Installation height h [mm]	31	32	33	34	35	37	40

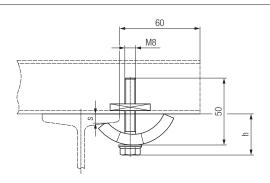


Girder Clips, clamping thickness 18 - 36 mm



Part No.	Description	Weight [kg]		
020180-08 × 36	Galvanized steel	0.220		
020480-08 × 36	Stainless steel (V4A)	0.220		

Clamping thickness s [mm]	18-20	20-24	24-28	28-32	32-36
Installation height h [mm]	42-44	44-48	48-52	52-56	56-60

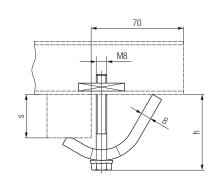



Girder Clips, non-twistable, clamping thickness 6 - 25 mm




Part No.	Description	Weight [kg]
i ait ivo.	Description	weight [kg]
020181-08	Galvanized steel	0.190

Clamping thickness s [mm]		6-25	
	Installation height h [mm]	32-40	

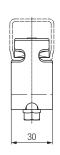

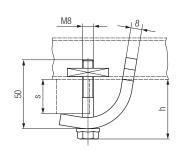

Towing Arms

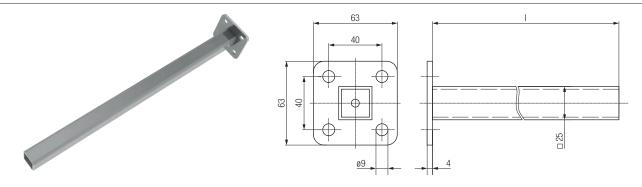


Part No.	Description	l [mm]	Weight [kg]
020195-630	Galvanized steel	630	1.000
020495-630	Stainless steel (V4A)	630	1.000

* Standard range Length adaptation on site

End Caps



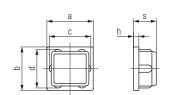


Part No.	For Support Arm	Description	a [mm]	b [mm]	c [mm]	d [mm]	s [mm]	h [mm]	Weight [kg]
020662-30	020185	DI#-	30	32	27	29	18	5	0.005
020662-40	020186	Plastic	40	40	35	35	21	5	0.004


Insulators

Insulators for indoor applications with high contamination and/or applications outdoors, up to 1000 V rated voltage





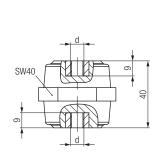


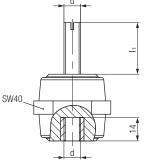

Part No.	Hardware	d	I ₁ [mm]	Weight [kg]
080401-08 × 08	Inner threading on both ends	M8 / M8	_	0.09
080402-830 × 08	Threaded bolts, galvanized	M8 / M8	30	0.98
080403-830 × 08	Threaded bolts, stainless steel	M8 / M8	30	0.98

Notch-type Cable Lug for Power Feed Line



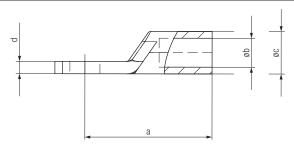

Part No.	Cross section [mm²]	a [mm]	b [mm]	c [mm]	d [mm]	Weight [kg/1000]
080051-06*	6	23.5	3.5	6.6	1.5	6.000
080051-10*	10	26.8	4.5	7.0	1.5	7.000
080051-16*	16	32.0	5.5	8.5	2.2	11.000
080051-25*	25	32.5	7.0	10.0	2.6	14.000
080051-35*	35	34.0	8.5	12.0	3.5	20.000
080051-50*	50	40.0	10.0	14.0	3.9	32.000
080051-70*	70	47.0	12.0	16.6	4.6	51.000
080051-95*	95	51.0	13.5	18.0	4.6	60.000

Material: Copper, tin-plated

Order lot size 10 pcs. per size

* Standard range


Connector Cable for Current Collector Head 081209


Cross section [mm ²]	Part	Longth* [m]	Cable diameter	Poted ourront [A]	Woight [kg]		
Cross section [mm ⁻]	PH (Phase)	PE (Potential Earth)	Length* [m]	[mm]	Rated current [A]	Weight [kg]	
6	081209-1.5 × 06 × 81	081209-1.5 × 06 × 92	1.5	6	54	0.086	
10	081209-1.5 × 10 × 91	081209-1.5 ×10 × 92	1.5	7	73	0.147	
16	081209-1.5 × 16 × 81	081209-1.5 × 16 × 82	1.5	10	98	0.234	

^{*} Custom lengths and bulk cables by request


Note: The connection cables are stressed by movement during operation and must be inspected along with the carbon collector shoes at regular intervals, then replaced after every five replacements of the carbon collector shoes. We recommend connecting the cables to a junction box, then installing fixed cabling from the junction box on.


Spring Assembly (lateral insertion) for Current Collector Head 081209

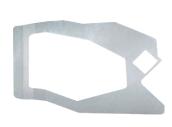

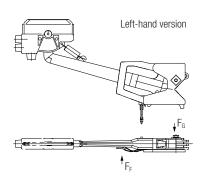

Spring assembly 081209	Part No.	Weight [kg]
Right-hand version	08-F030-0100	0.100
Left-hand version	08-F030-0101	0.100

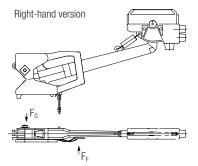


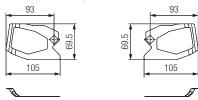

Tools and Assembly Accessories


Mounting Comb 081045

For setting the rail holder spacing while mounting the Support Arms

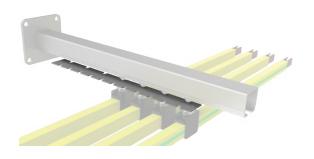

Part No.	Description	Weight [kg]
081045*	Mounting Comb	0.190

^{*} Standard range

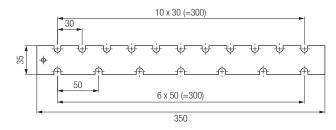

Bending Device 081010



Part No.	Description	Weight [kg]
081010*	Bending Device	20.000
081011*	Spring band package	5.000

^{*} Standard range

Horizontal and vertical curves for all conductor rails in the Program 812 can be bent using the Bending Device 081010 (see also Technical Information Sheet Tl0812-0019-E). For bending curves, the spring band package is also included and must be inserted into the profile form.

When the Bending Device is ordered, a complete set of spring bands (inserts) and a bending manual are included.

Contact Grease for Connection Points



Part No.	Туре	Weight [kg]
080021*	Contact Grease	0.030

^{*} Standard range


Application: Use contact grease to avoid corrosion at contact points. A thin film is applied with finger or brush to the faces of the conductor rail and the clamping area of the connectors.

One tube will last for about 200 connection points.

Replacement Parts

Complete Current Collector Head for Current Collector 081209




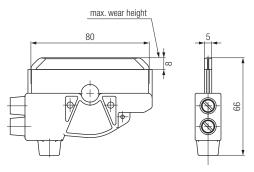

Decembring	Part	Maiabh Ilan	
Description	PH (Phase)	PE (Potential Earth)	Weight [kg]
Copper Graphite Shoe 812, 80 A, reversible operation	081001-12*	081001-22*	0.090
Copper Graphite Shoe 812, 80 A, towing operation	081001-32*	081001-42*	0.090

Note: The carbon brush and plastic insulation should always be replaced together.


Stabilization Springs for Current Collector Head 081209

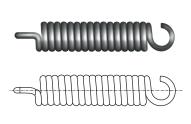


Туре	For Current Collectors		Operating type	Part No.
		012		
	081209-	022	Reversible operation	RZ-081 GI
	001209-	112		NZ-001 GI
Ctabilization apring		122		
Stabilization spring	001000	013	.	D7.0504
		023		
	081209-	113	Towing operation	RZ-0561
		123		

Replacement Copper Graphite Shoes with Insulators for Current Collector Head 081205... / 081206... / 081207... / 081208...



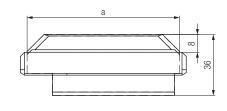

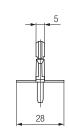

33

The copper graphite shoe is protected by a plastic insulator, so that accidental contact with live parts of the engaged Current Collector is not possible. Smallest bending radius for 100 A copper graphite shoe R = 1800 mm - smallest bending radius for 40 A copper graphite shoe R = 1000 mm

Part No.	Туре	Amperes [A]	a [mm]	Weight [kg]
081001-11*	Copper graphite shoe	100	90	0.098
08-K154-0260	Copper graphite shoe for outdoor applications	100	90	0.098
081001-15	Copper graphite shoe	40	63	0.058


Installation note: When replacing the Copper graphite shoe, it is not necessary to remove the collector head because the shoe is designed as a plug-in contact (not a screw contact). Insulator is included.

* Standard range

^{*} Standard range

Replacement Parts

Replacement Parts for Current Collectors

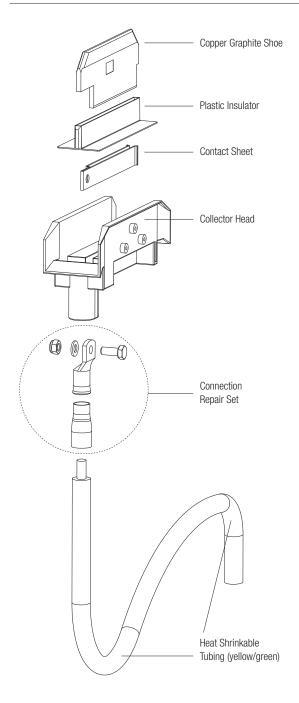

Part No.	Туре	Weight [kg]
08-A150-0001-2*	Collector Head PE	0.1
08-A150-0001-1*	Collector Head PH	0.1
08-K154-0397*	Connection Repair Set, including: 1 × Contact Sheet (1846) 1 × Tubular Cable Lug (24120) 1 × Heat Shrinkable Tubing black, 55 mm (24121) 10 × Heat Shrinkable Tubing yellow/ green, 50 mm (24139) 1 × Hexagonal Screw DIN933 M8 × 20 (1120) 1 × Lock-nut DIN985-M08-A4 (580) 1 × Washer DIN125-A8, 4-A4 (685)	0.6
	Connecting Cable	
	Connecting Cable (pre-assembled) – on request	

^{*} Standard range

Other Products from Conductix-Wampfler

The products described in the this catalog represent a few of the products from the broad spectrum of Conductix-Wampfler components and systems for the transfer of energy, data, gases, and fluids. The solutions we deliver for your applications are based on your specific requirements. In many cases, a combination of several different Conductix-Wampfler products are needed to fill the application. You can count on all of Conductix-Wampfler's business units for hands-on engineering support - coupled with the perfect solution to meet your energy management and control needs.



Motor driven cable reels

Motor driven reels by Conductix-Wampfler are the perfect solution for managing long lengths of heavy cable and hoses in very demanding industrial applications. Monospiral, level wind, and random wind spools.



Slip ring assemblies

Whenever powered machinery needs to rotate 360°, field proven slip ring assemblies by Conductix-Wampfler can flawlessly transfer energy and data. Here, everything revolves around flexibility and reliability.



Conductor bar

Whether they are enclosed conductor rails, expandable single-pole bar systems, or high amperage bar for demanding steel mill use up to 6000 amps. Conductix-Wampfler's conductor bar is the proven solution to reliably move people and material.



Spring driven cable reels

We have 60 years experience and trusted brands such as Insul-8, Wampfler, and IER. We offer small cord reels all the way to large multi-motor units, a wide range of accessories, and hazardous location reels



Cable Festoon systems

It's hard to imagine Conductix-Wampfler cable trolleys not being used in virtually every industrial application. They are reliable and robust and available in an enormous variety of sizes and models.



Push Button Pendants

Our ergonomic pendants are ideally suited for industrial control applications. They are available in a wide range of configurations for overhead cranes and other machinery.



Radio remote controls

Safe, secure, and reliable radios use the latest in microprocessor technology. Available in several models for overhead crane control and other types of machinery.



Inductive Power Transfer IPT®

The contact-less system for transferring energy and data. For all tasks that depend on high speeds and absolute resistance to wear.



Data Transfer: ProfiDAT® | Nexus

Safe & reliable wireless communication using slotted waveguide technology that's PROFIsafe compatible.

Nexus NB for narrow band signal transfer over power conductors



LJU Automation EMS Controller

Specialized controllers Programmable by parameters, Ideal for Electrified Monorails at automotive plants, with over 1500 in service worldwide. Adaptable for other applications



BridgeGuard™

Prevents crane to crane and crane to end collisions. IP69K rated for indoor and outdoor use, with a 3 ft to 150 ft range. Compliant with IEC 60068-2-6:2007



Air & Spring balancers | Air hoists

Conductix-Wampfler offers the full line of ENDO positioning devices. Rugged, reliable steel construction increasing safety and decreasing fatigue and body stress.

www.conductix.us

USA / LATIN AMERICA MÉXICO BRAZIL CANADA 10102 F Street 1435 Norjohn Court Calle Treviño 983-C Rua Luiz Pionti, 110 Omaha, NE 68127 Unit 5 Zona Centro Vila Progresso Itu, São Paulo, Brasil Burlington, ON L7L 0E6 Apodaca, NL México 66600 CEP: 13313-534 **Customer Support Customer Support Customer Support Customer Support** Phone +1-800-521-4888 Phone +1-800-667-2487 Phone (+55 11) 4813 7330 Phone (+52 81) 1090 9519 (+52 81) 1090 9025 (+52 81) 1090 9013 Phone +1-402-339-9300 Phone +1-450-565-9900 +1-402-339-9627 +1-450-951-8591 (+52 81) 1090 9014 Fax (+55 11) 4813 7357 Fax Fax Fax

info.ca@conductix.com

Contact us for our Global Sales Offices

info.us@conductix.com

latinamerica@conductix.com



info.br@conductix.com

info.mx@conductix.com



KAT0812-0002h-US





